



Repairing Philips GoGear SA3245 2 Battery and Frozen screen

When you have frozen screen with "Philips" logo.

Written By: ialexandroo




Step 1 — Battery and Frozen svreen




- Find and replace this screw

Step 2

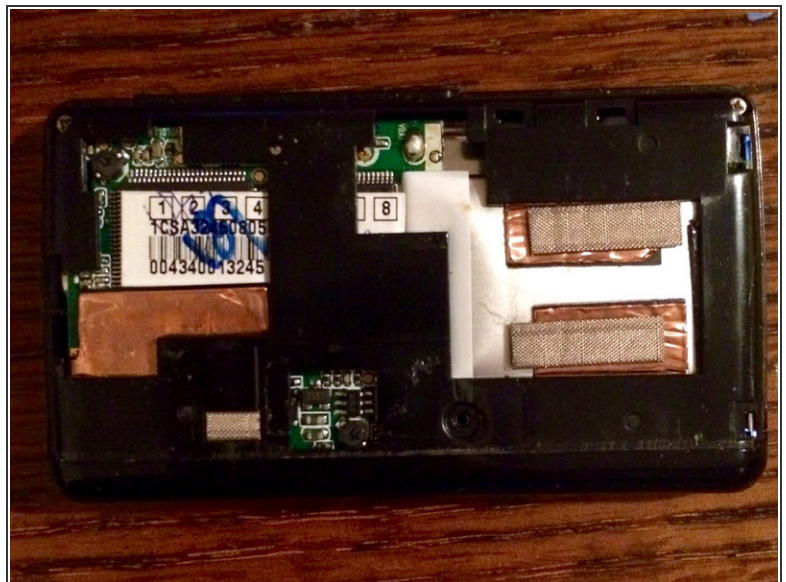

- Slide the metal panel
- It is slightly difficult

Step 3

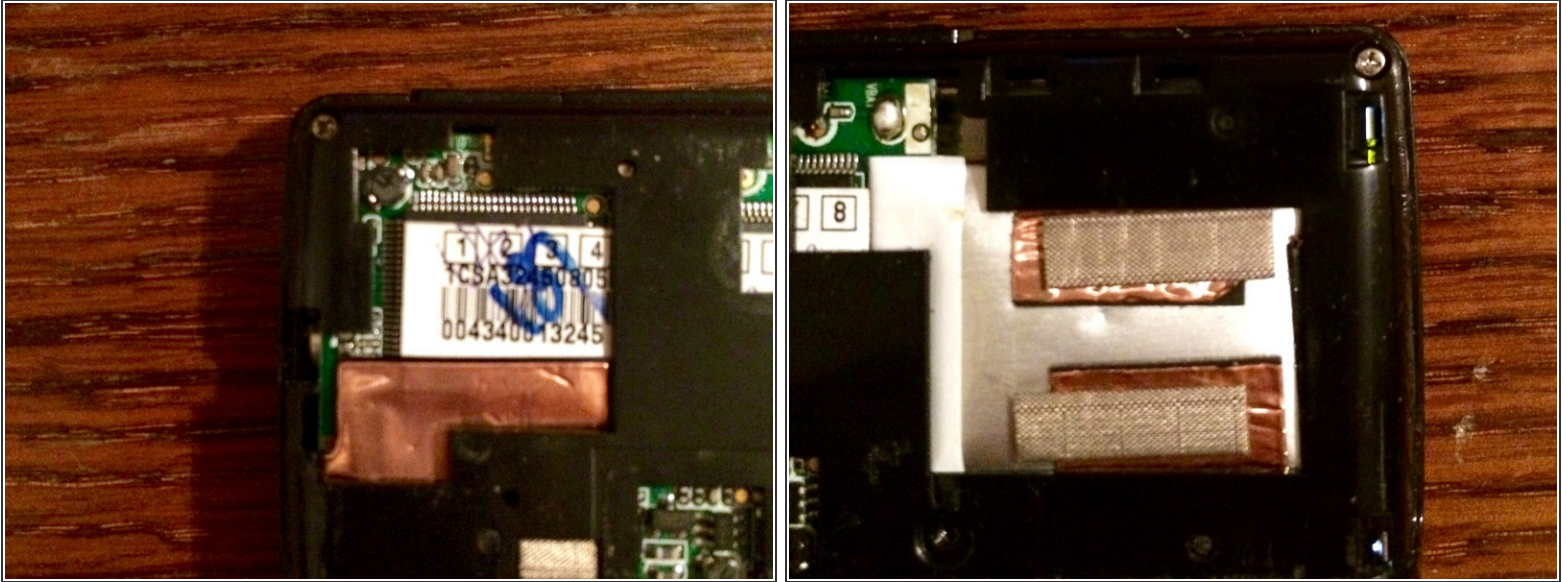


- Remove the two screws at the top left and right of the unit.

Step 4






- Carefully remove the front panel

Step 5

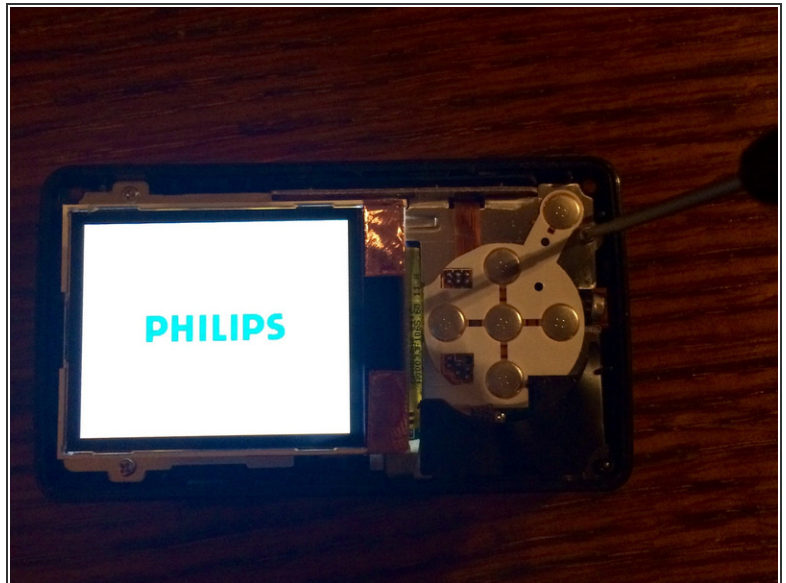

- Insert wisdom here.

Step 6

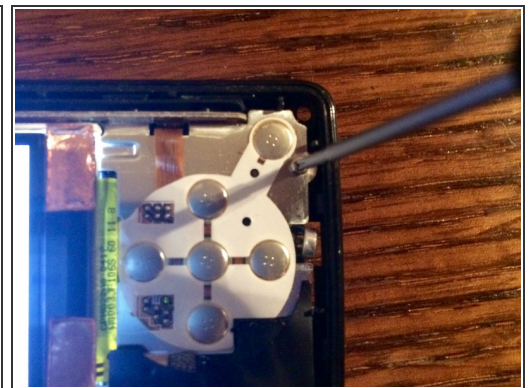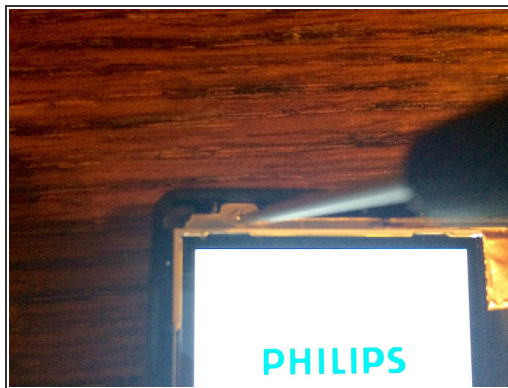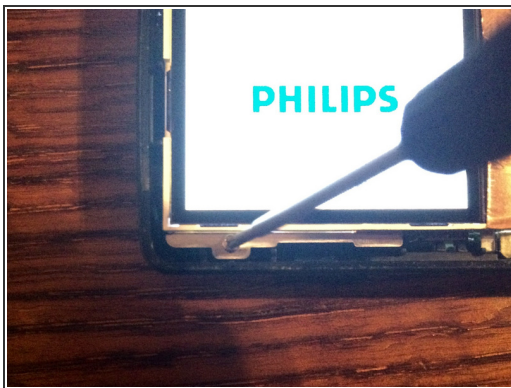


- Remove this 3 screws

Step 7



- Carefully remove the motherboard with display

Step 8

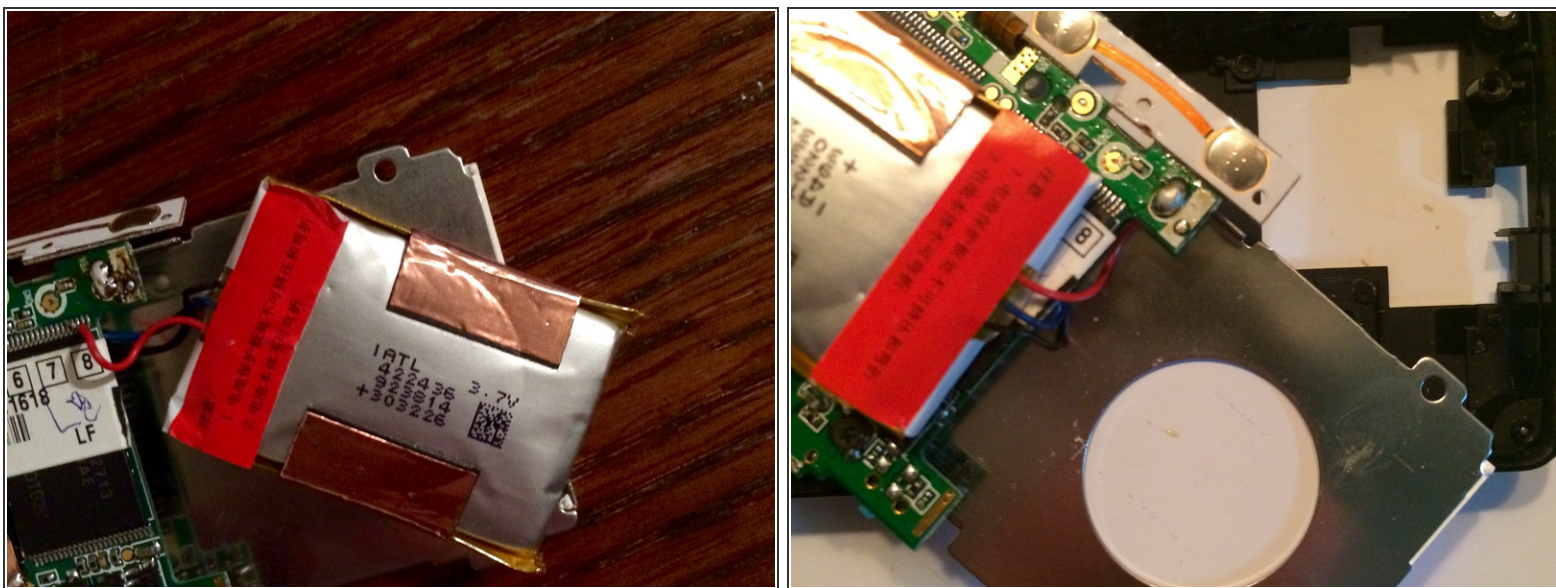

- This is a defective battery. Replace it with a new one.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-03 10:36:18 PM.